



WHEEL-CHECK™

THE LOOSE WHEEL-NUT INDICATOR




photo 1



photo 2


Installation Procedures

1. Torque wheel nuts to proper specifications.
2. Ensure correct size by measuring nut from flat to flat.
3. Place one wheel-check over each nut with the collar towards the wheel. Push with both thumbs or a socket flush to the wheel. *(Placing the collar towards the wheel provides ample room for gripping the Wheel-Check if replacement of the Wheel-Check is required.)*
4. For disc wheel, point the point to the center of following stud (photo 1).
5. For other wheel types (spoke pattern), point indicators towards the hub (photo 2).
6. When a wheel-check indicator has moved or has become deformed, replace with a red identifier (wheel-torque) for service provider.

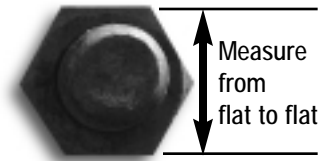

Measure from flat to flat

Side View of wheel with Wheel-Check on the nut

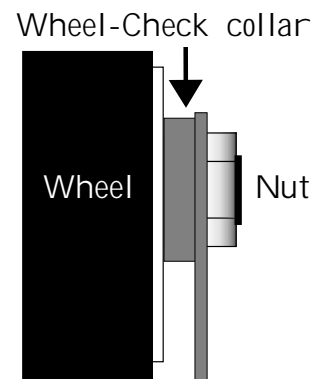

A SIMPLE SOLUTION TO YOUR RISK MANAGEMENT

888.829.1556
www.wheel-check.com