

WHEEL-CHECK®
THE LOOSE WHEEL-NUT INDICATOR



Custom sizes and colors
available upon request.



How to Install Wheel-Check® Properly

1. Torque wheel nuts to proper specifications (recommended ft/lb).
2. Ensure correct size by measuring unit from flat to flat. **(DIAGRAM 1)**
3. **Place one Wheel-Check® over each nut with the raised collar towards the wheel.** Wheel-Check® name, number and size should be facing out. Hold the arrow of the indicator pointing in your preferred pattern. Push the Wheel-Checks on with a socket wrench or a PVC pipe. It's that easy, no other tools required.* **(DIAGRAM 2)**
4. For disc wheel, point the point to the center following stud in a clockwise rotation **(PHOTO 1)**.
5. For other wheel types (spoke pattern), point indicators towards the hub **(PHOTO 2 and 3)**.

*** STEP #3 IS VERY IMPORTANT FOR CORRECT INSTALLATION**



PHOTO 1



PHOTO 2



PHOTO 3


THE DRIVER WILL DO THEIR WALK-AROUNDS BY LAW. If a nut has backed off as little as 50 ft-lb, the driver can notice if he observes closely. Once the nut has backed off 100 ft-lb, the movement is easily noticeable.

INSTALLATION OF RED WHEEL-TORQUES. If the driver notices a nut has moved, the driver would remove the yellow Wheel-Check®, retorque the loose nut and then replace with a red Wheel-Torque. This would identify the loose nut to the maintenance shop at a simple glance and they will know that the whole wheel must be carefully serviced.

DIAGRAM 1
Measure from flat to flat



DIAGRAM 2
Side view of wheel with Wheel-Check® correctly placed on nut

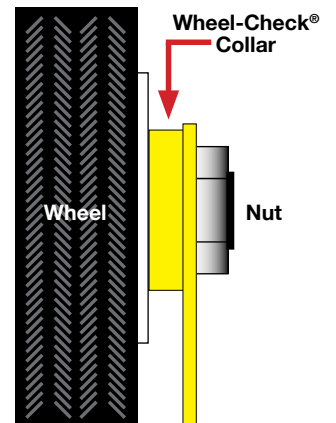

Wheel-Check® is an indicator and must always be visually checked when a driver is leaving or getting into his truck. Please call 888-829-1556 with any questions or concerns.

© Wheel-Check® is a registered trademark and division of Wheel-Safety®. The Home of the Original Wheel-Checks. The use of Wheel-Check® in no way guarantees wheel-offs will not occur.

T 888.829.1556 / 905.829.0909

F 905.829.0808

E info@wheel-check.com

W www.wheel-check.com